


dacor

LET THE SHOW BEGIN

RNR30N[I]




RNR30NIS Range Cooktop Assembly

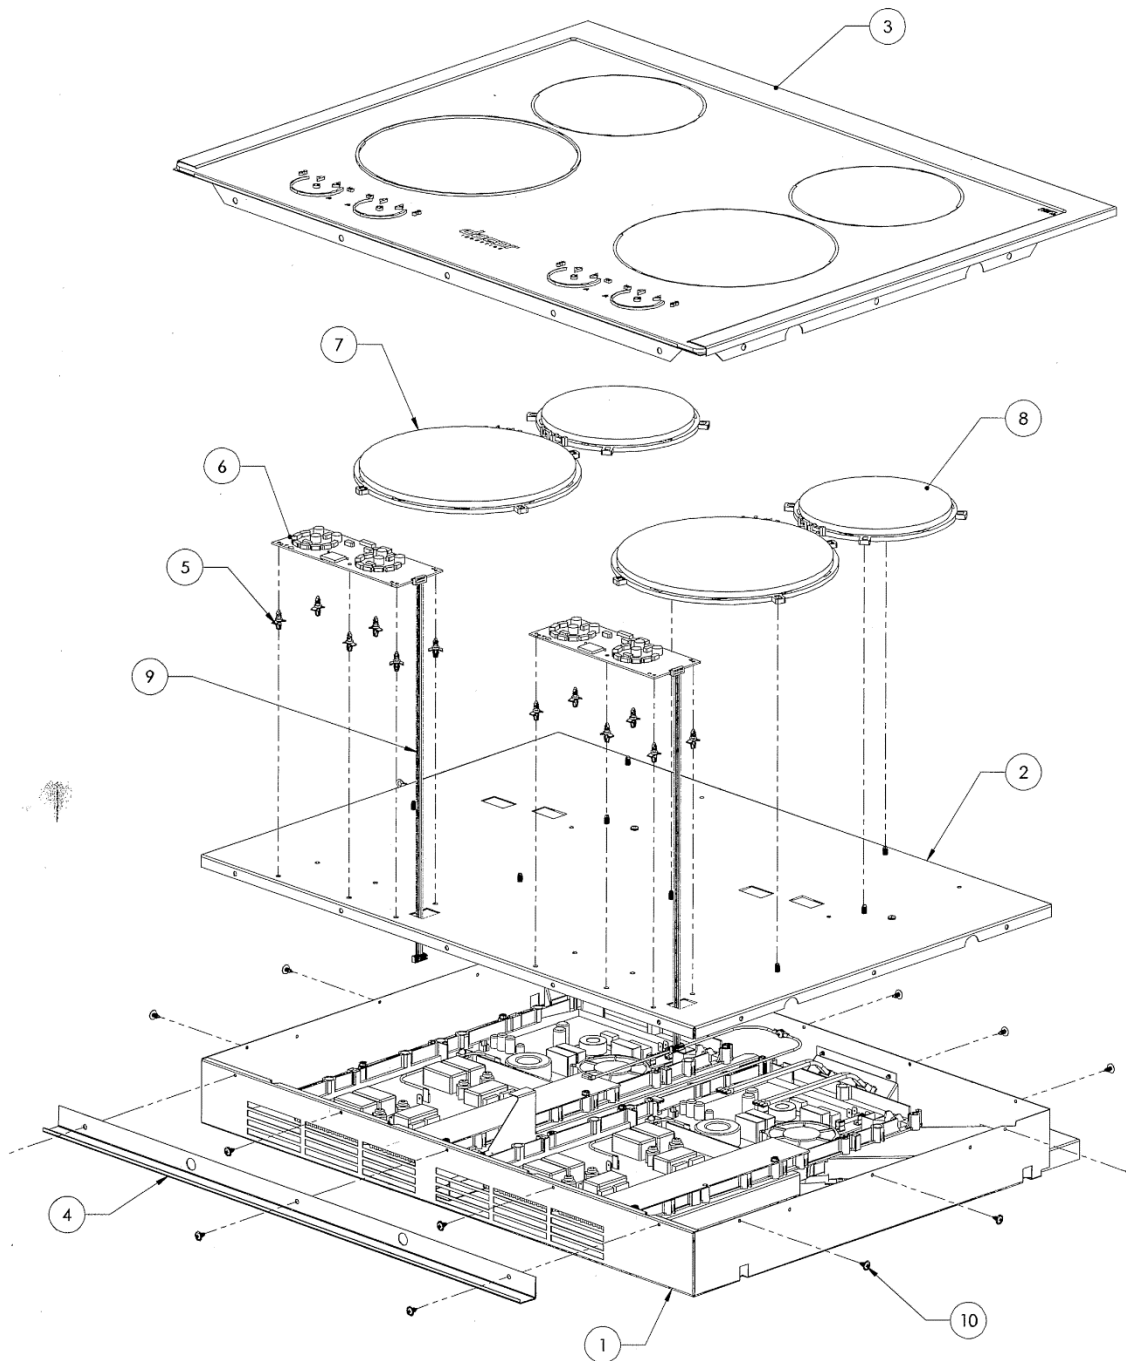

Item	Part#	Description
1	108536	Induction Box
2	702286	Coil Plate, Asy
3	702284	Glass Panel Assembly
4	108766	Gutter, Top Section
5	107512-03	Support Locking, Control Board

Item	Part#	Description
7	107520	Coil, Inductor 210mm
8	107518	Coil, Inductor 145mm
9	107524	Harness w/Molex Plug, LH
9	107524	Harness w/Molex Plug, RH
10	83263	Screw, Phil TRS, #8 X 3/8

RNR30NIS Range Control Panel Assembly

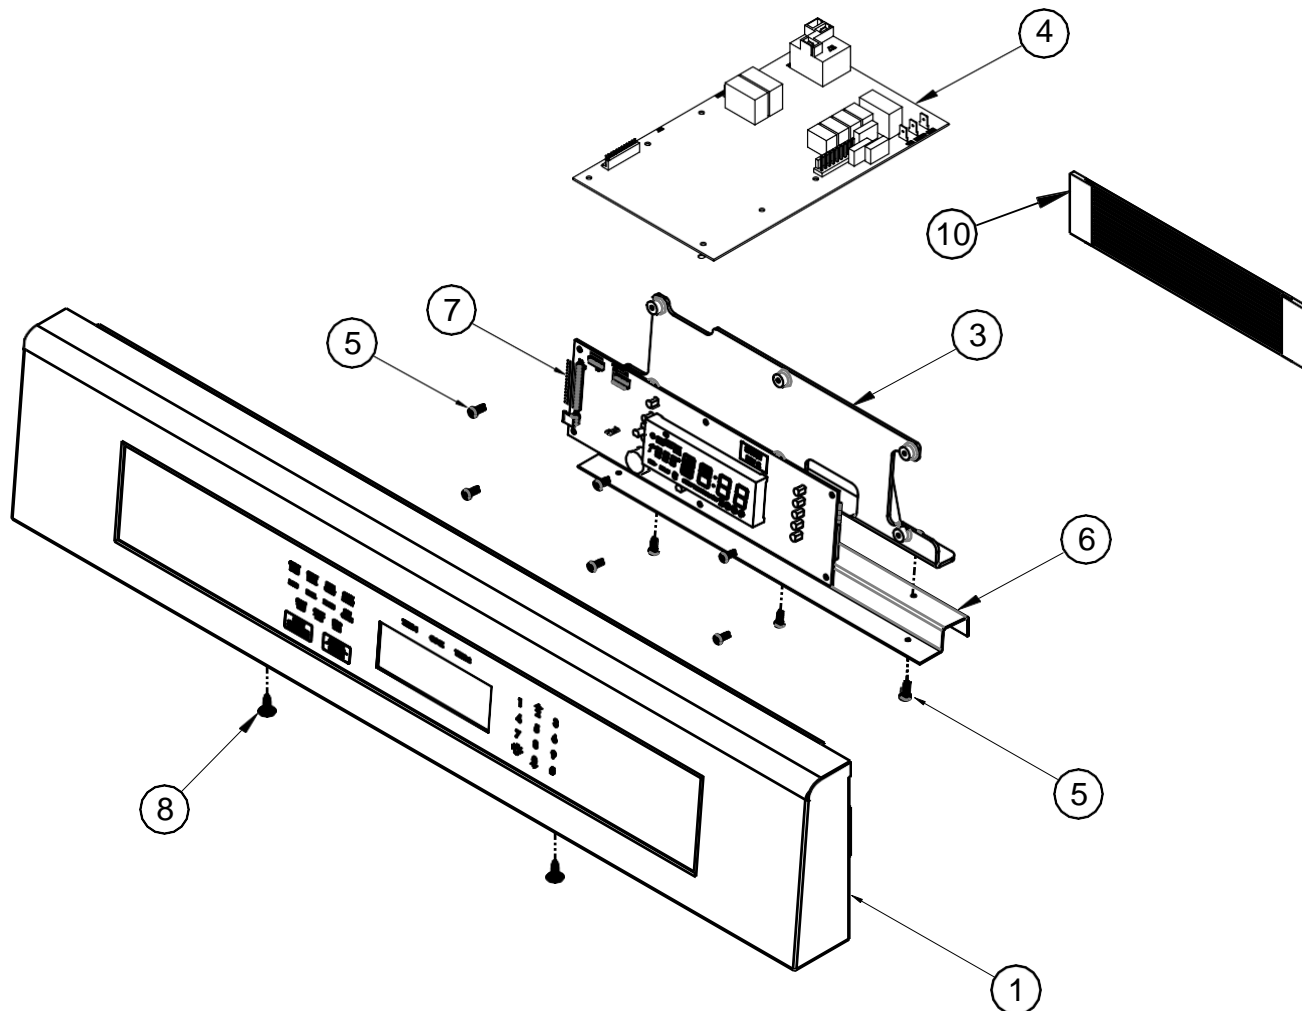


[Back to Front Page - Click Here](#)

Item	Part #	Description
1	701640	Control Panel, Assembly
2	83538	PCB Support (not shown)
3	105334	Controller Mount
4	102377	Relay Board
5	105486	Screw, 6-18 x 3/8", Plastic
6	107270	Support, LED Display

Item	Part #	Description
7	107392	Display Module, LED
8	83708	Screw, Torx Wfr Hd, #8 x 1/2"
9	107329	Wire Harness, Power (not shown)
10	105655	Ribbon Cable

RNR30NIS Range Door Assembly

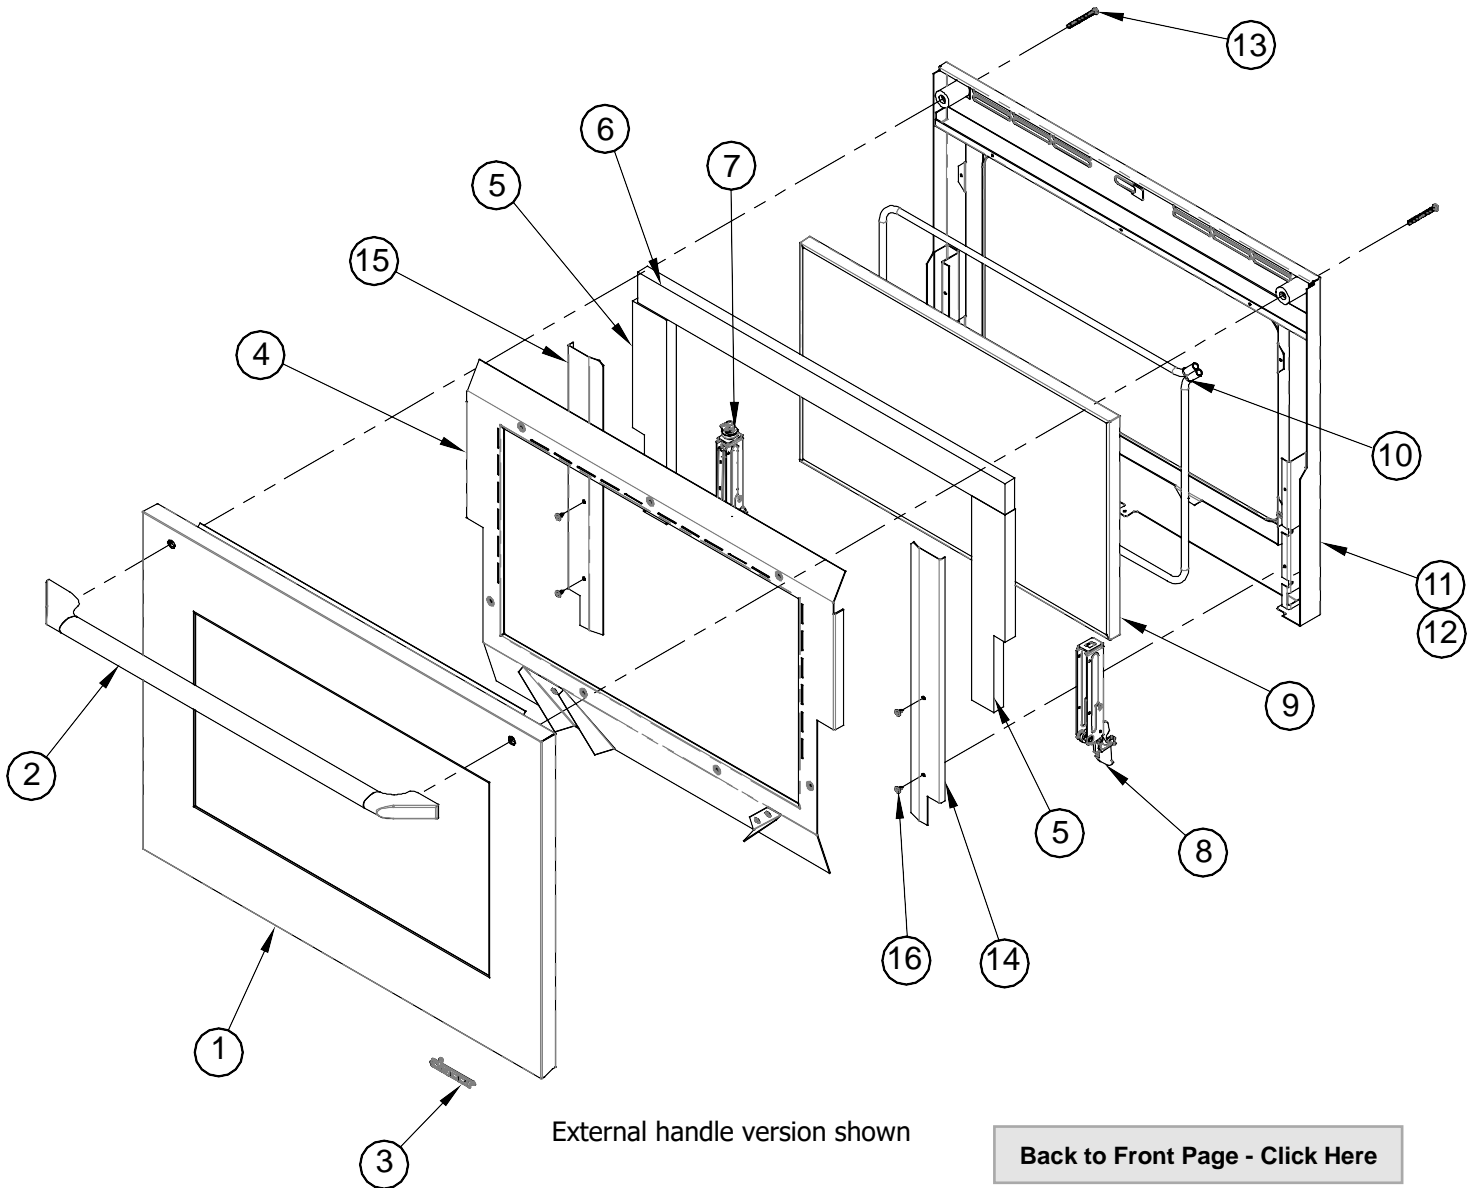

[Back to Front Page - Click Here](#)

Item	External Handle Part #	Built-in Handle Part #	Description
1	701427-02 ¹	701697 ²	ASSEMBLY, DOOR SKIN
2	13659-001	NA	ASSEMBLY, DOOR HANDLE
3	110168	110168	LOGO, DACOR, 4", CHROME
4	107221B	107221B	HEAT SHIELD
5	105353	105353	INSULATION, SIDE DOOR
6	105352	105352	INSULATION, TOP DOOR
7	72711	72711	HINGE, LEFT
8	72710	72710	HINGE, RIGHT

¹ For complete door assembly, order part # 701426-03 which includes handle and Dacor logo on front.


² For complete door assembly, order part # 701698-02 which includes Dacor logo on front.

Item	External Handle Part #	Built-in Handle Part #	Description
9	72968	72968	WINDOW PACK
10	100015	100015	GASKET, WINDOW PACK
11	701428-04 ³	701428-05 ³	ASSEMBLY, DOOR LINER
12	701430BP ⁴	701430BP ⁴	DOOR LINER
13	100026	NA	SCREW, #10-32 X 2.0, TORX
14	105510-01	105510-01	HINGE BRACKET COVER, RIGHT
15	105510-02	105510-02	HINGE BRACKET COVER, LEFT
16	83263	83263	SCREW, PHIL TRS, #8 X 3/8

³ Pre-assembled, includes door liner, window pack with gasket, hinges, hinge covers, all insulation, heat shields and air deflectors.

⁴ Door liner alone.


RNR30NIS Range Oven Cell Assembly

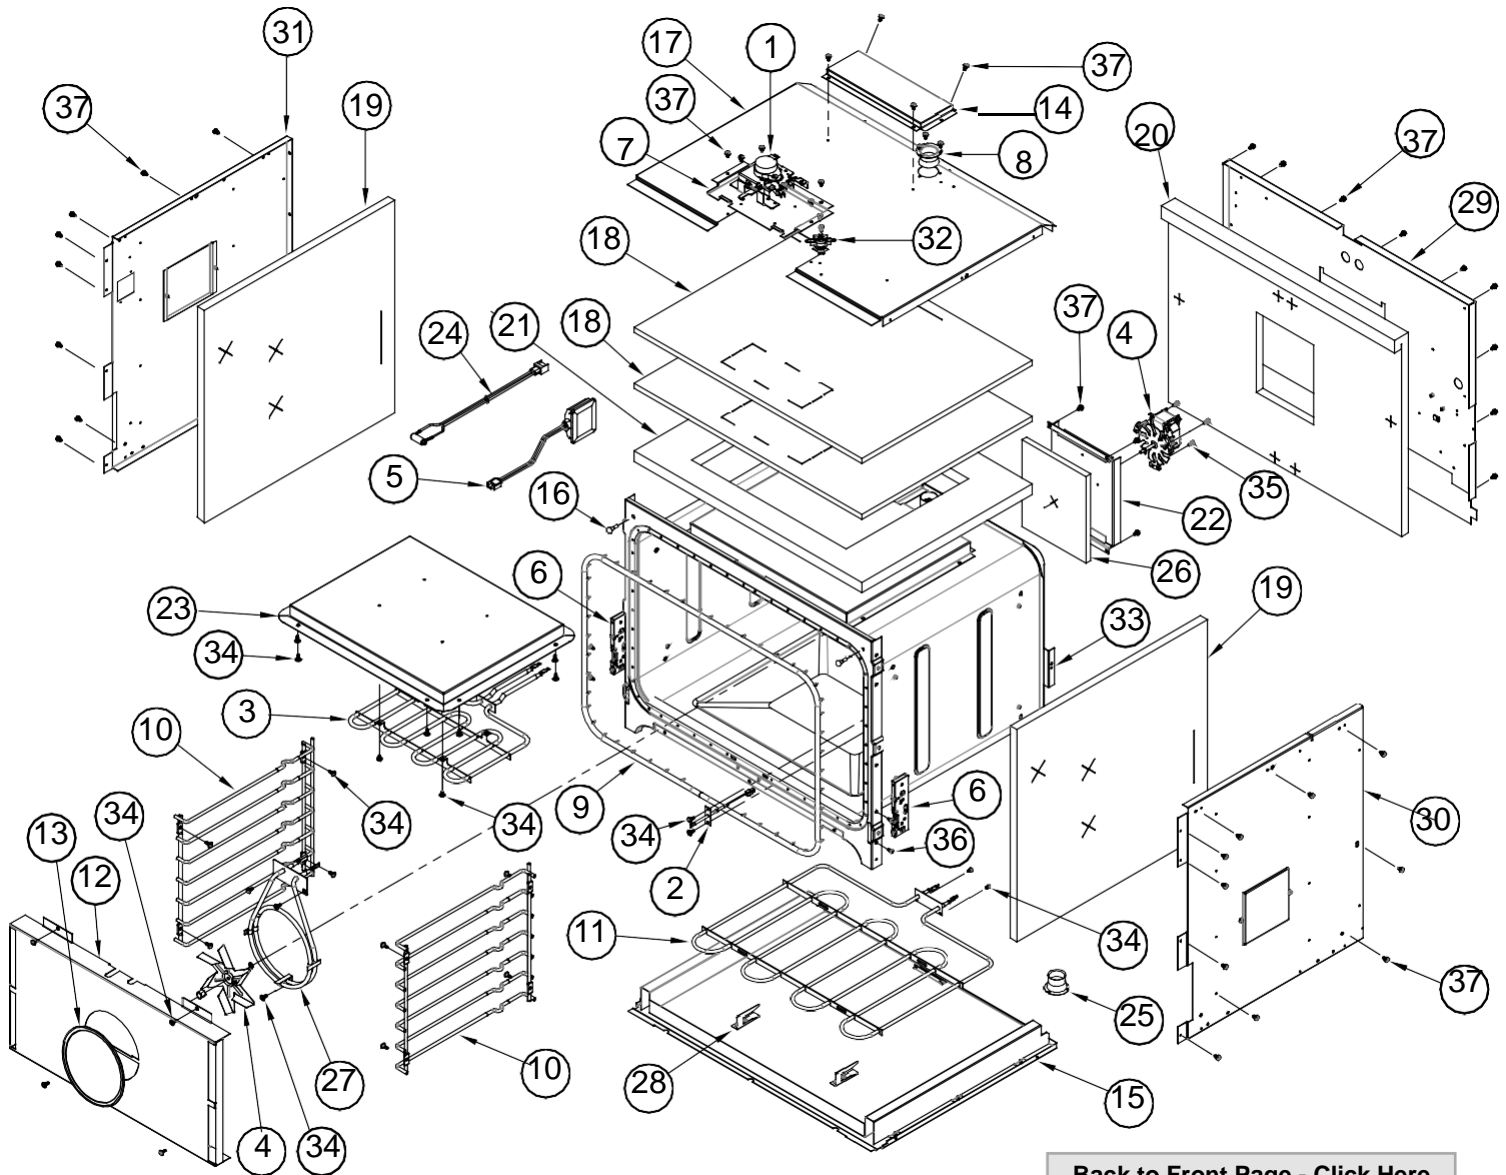

[Back to Front Page - Click Here](#)

Item	Part #	Description	Item	Part #	Description	Item	Part #	Description
1	100090	Door Latch	12	105329BP	Convection Baffle	25	72755	Smoke Eliminator, Bot.
2	72752	Temperature Sensor	13	82891	Filter, Convection	26	80168	Insulation, Conv. Motor
3	102369	Broil, Element	14	107116	Duct, Smoke Eliminator	27	82377	Convection Element
4	102145	Convection Fan Motor1	15	105919	Bake Pan	28	107239	Holder, Bake Element
5	107111	Assy, Light, Halogen2	16	83618	Rubber Bumper	29	701770	Case Back
6	72348	Receptacle, Hinge	17	105917	Case Top	30	701692	Case Side, RH
7	105991	Latch Plate	18	106976	Insulation, Broil, Top	31	701693	Case Side, LH
8	105485	Smoke Eliminator, Top	19	106977	Insulation, Case Side	32	92321	Switch, Hi Limit
9	105366	Gasket, Cell	20	106978	Insulation, Case Back	33		Not replaceable
10	106991	Support Rack	21	107104	Insulation, Broil	34	83708	Screw, #8 x 1/2, Torx
11	106573	Bake, Element	22	36280	Mounting Plate, Conv Mtr	35	83379	Screw, Slot, #8 x 1/2"
1 Includes fan blade, hex nut and washer			23	107105	Broil Pan	36	83709	Screw, Torx, #10 x 1/2", Black
2 Includes light bulb			24	72717	Socket, Meat Probe	37	83023	Screw, Slot, #10 x 3/8"

RNR30NIS Range Outer Assembly

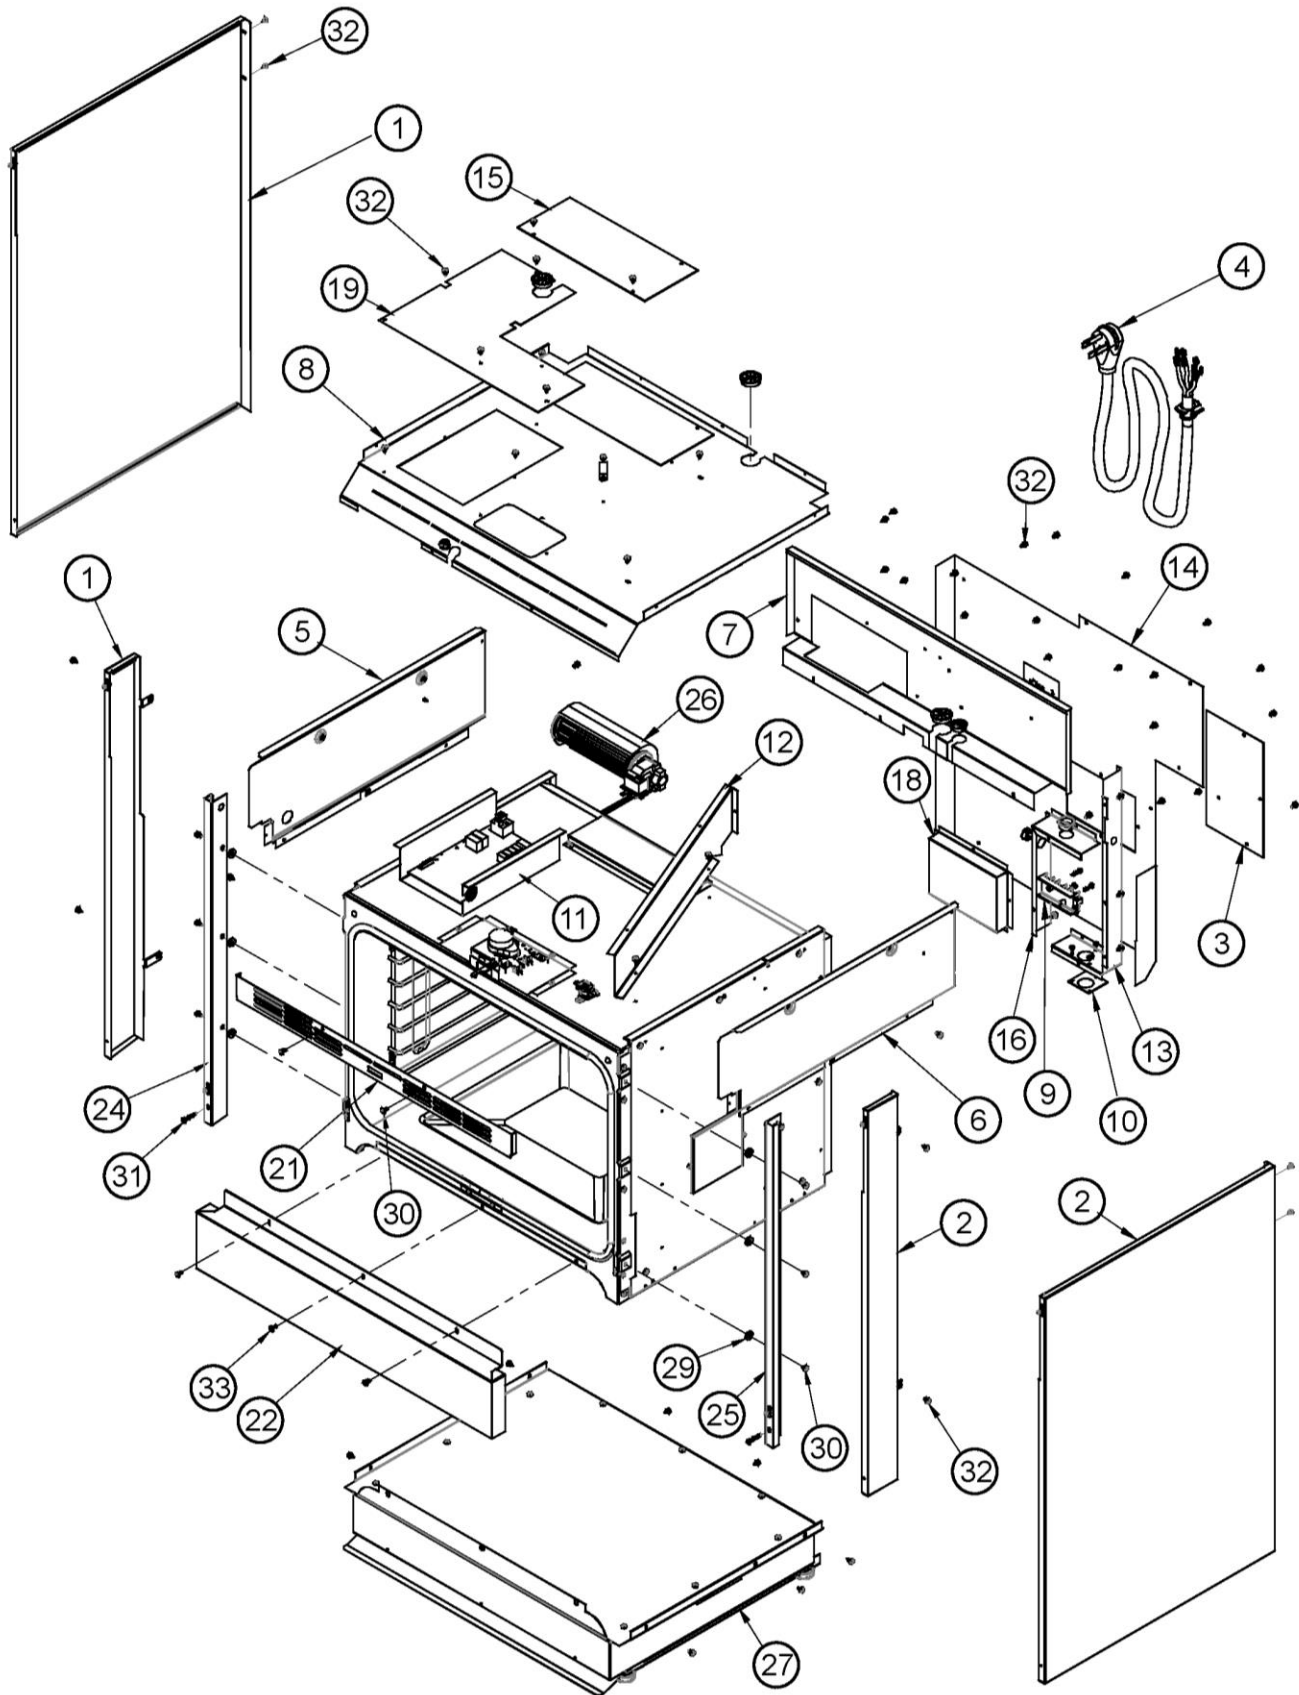

RNR30NIS Range Outer Assembly Parts

Item	Part # Freestanding Units	Part # Slide-In Units	Description
1	107140-01	NA	Panel, Side, LH
	NA	701676-01	Panel, Side, LH, 3 1/4"
2	701677-02	NA	Panel, Side, RH
	NA	107139-02	Panel, Side, RH, 3 1/4"
3	107316	107316	Cover, Electrical
4	102554-02	102554-02	Power Cord, 50 Amp
5	107264	107264	Side Support, LH
6	107265	107265	Side Support, RH
7	107266	107266	Rear Panel, Top
8	107267	107267	Electrical Chassis
9	102384	102384	Terminal Block
10	102385-02 ¹	NA	Adaptor, 1.125
11	105988	105988	Relay Board Support
12	105322	105322	Air Deflector, Cool Fan
13	107307	107307	Rear Exhaust, Right
14	107282	107282	Rear Cover
15	107368	107368	Cover, Cooling Fan
16	107308	107308	Box, Electrical
18	107117	107117	Box, Rear Panel
19	107119	107119	Cover, Relay
21	107202B	107202B	Grill, Intake
22	701659	701659	Panel, Kick
24	701739-01	701739-01	Post Trim, LH
25	701739-02	701739-02	Post Trim, RH
26	82986	82986	Cooling Fan
27	NA	NA	Base (see page 8)
28	102403	102403	Ground Screw (not shown)


Item	Part # Slide-In Units	Description
29	83555	Screw, Washer, Fiber
30	83263	Screw, #8 x 3/8, Black
31	105737	Screw, #8 x 1 1/4
32	83023	Screw, Slot, #10 x 3/8"
33	83708	Screw, #8 x 1/2, Torx
-	107283	Wiring Harness, Main (not shown)
-	102403	Grounding Screw, #10 (not shown)
-	92191-01	Bushing, Split, .75 dia
-	92191-02	Bushing, Split, 1.0 dia
-	92191-03	Bushing, Split, 1.375 dia

[Back to Exploded View - Click Here](#)

[Back to Front Page - Click Here](#)

¹ Not used on models that end in -C

RNR30NIS Range Base Assembly

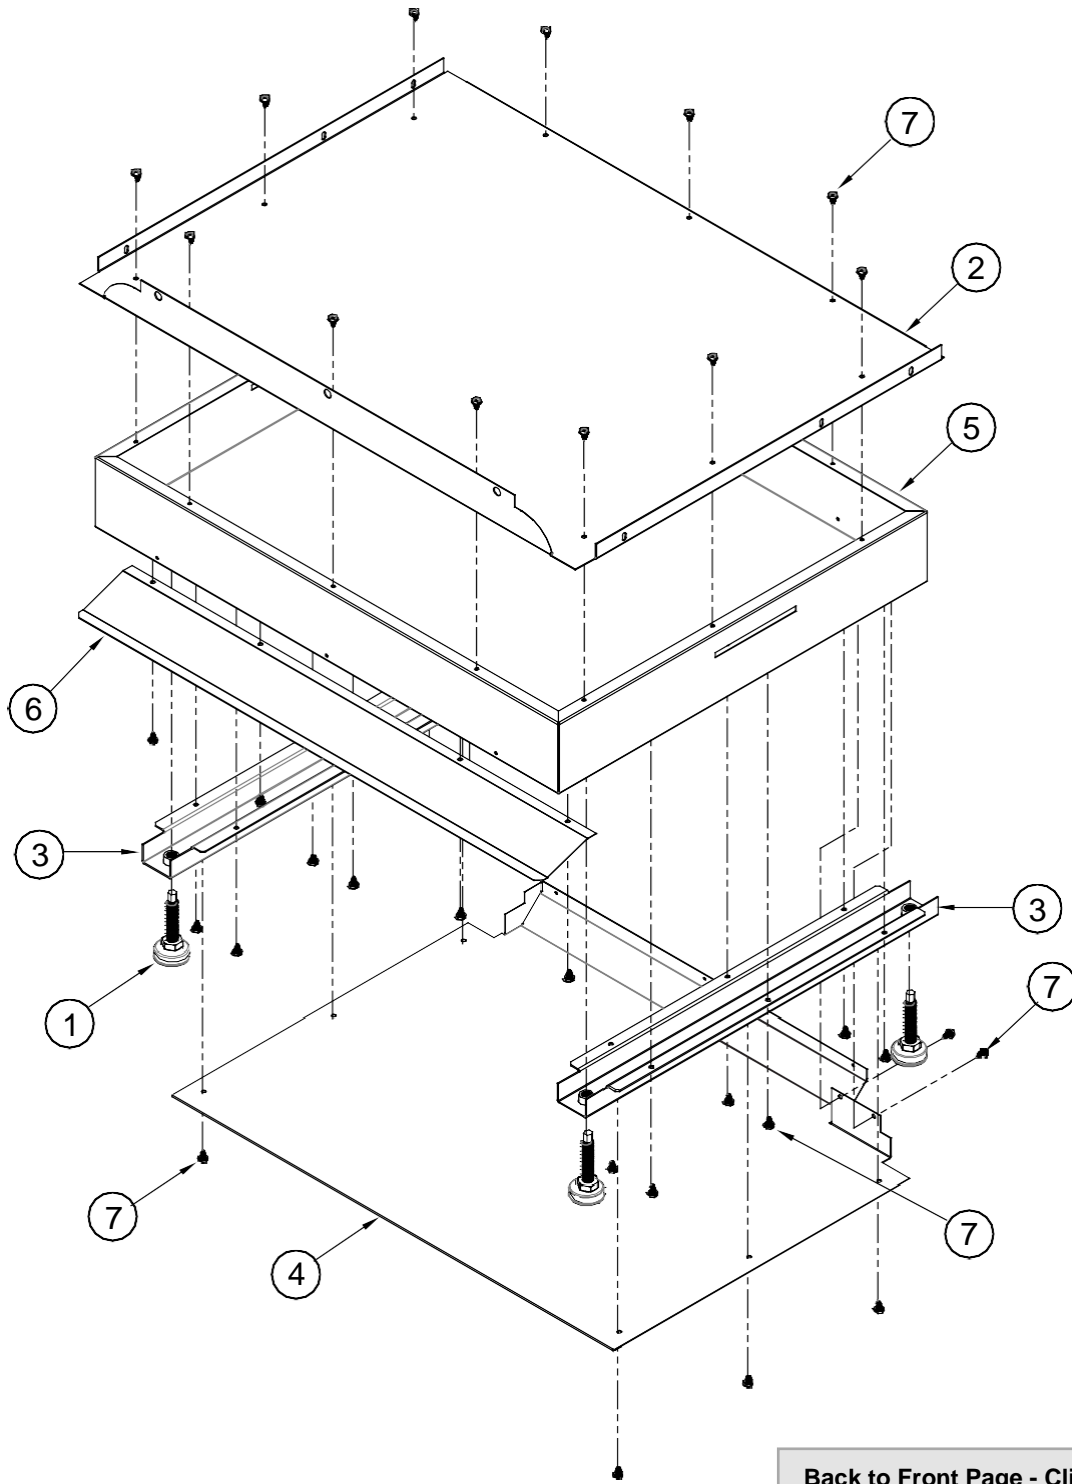


[Back to Front Page - Click Here](#)

Item	Part #	Description
1	83359	Leg
2	107212	Panel, Base
3	701724	Base Leg Rail
4	105922	Exhaust Plate
5	107210	Base Box

Item	Part #	Description
6	107213	Exhaust Deflector
7	83023	Screw, Slot #10 x 3/8
-	105733-02	Anti-Tip Bracket (not shown)

RNR30NIS Range Accessories

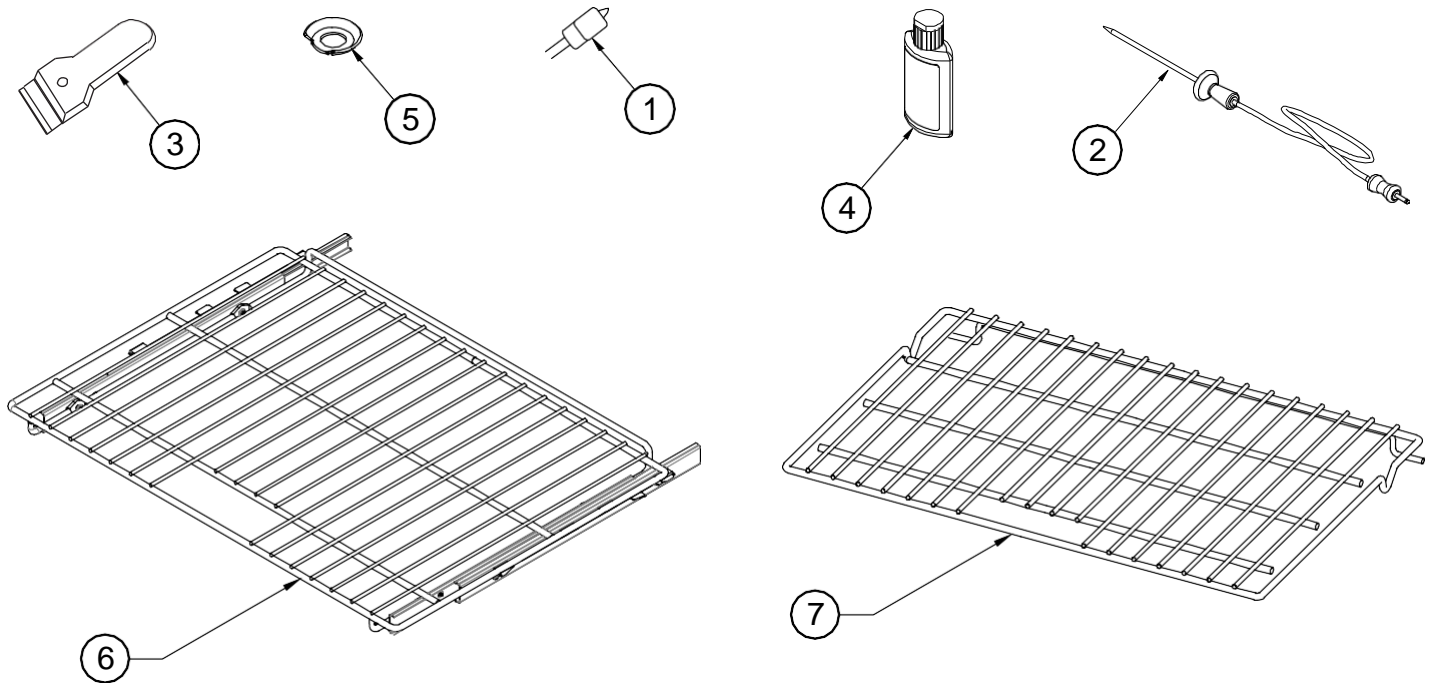

[Back to Front Page - Click Here](#)

Item	Part #	Description
1	107111	Light Bulb, 120 Vac, 20 Watt
2	72723	Meat Probe
3	82499	Scraper, Ceran
4	A300	Cleaning Creme, Ceran
5	102402	Cup Washer
6	701464	GlideRack Oven Rack
7	106992	Standard Oven Rack