

RNWO230

dacor


LET THE SHOW BEGIN

RNWO230



Wall Oven Door Assembly

Epicure style external handle shown.

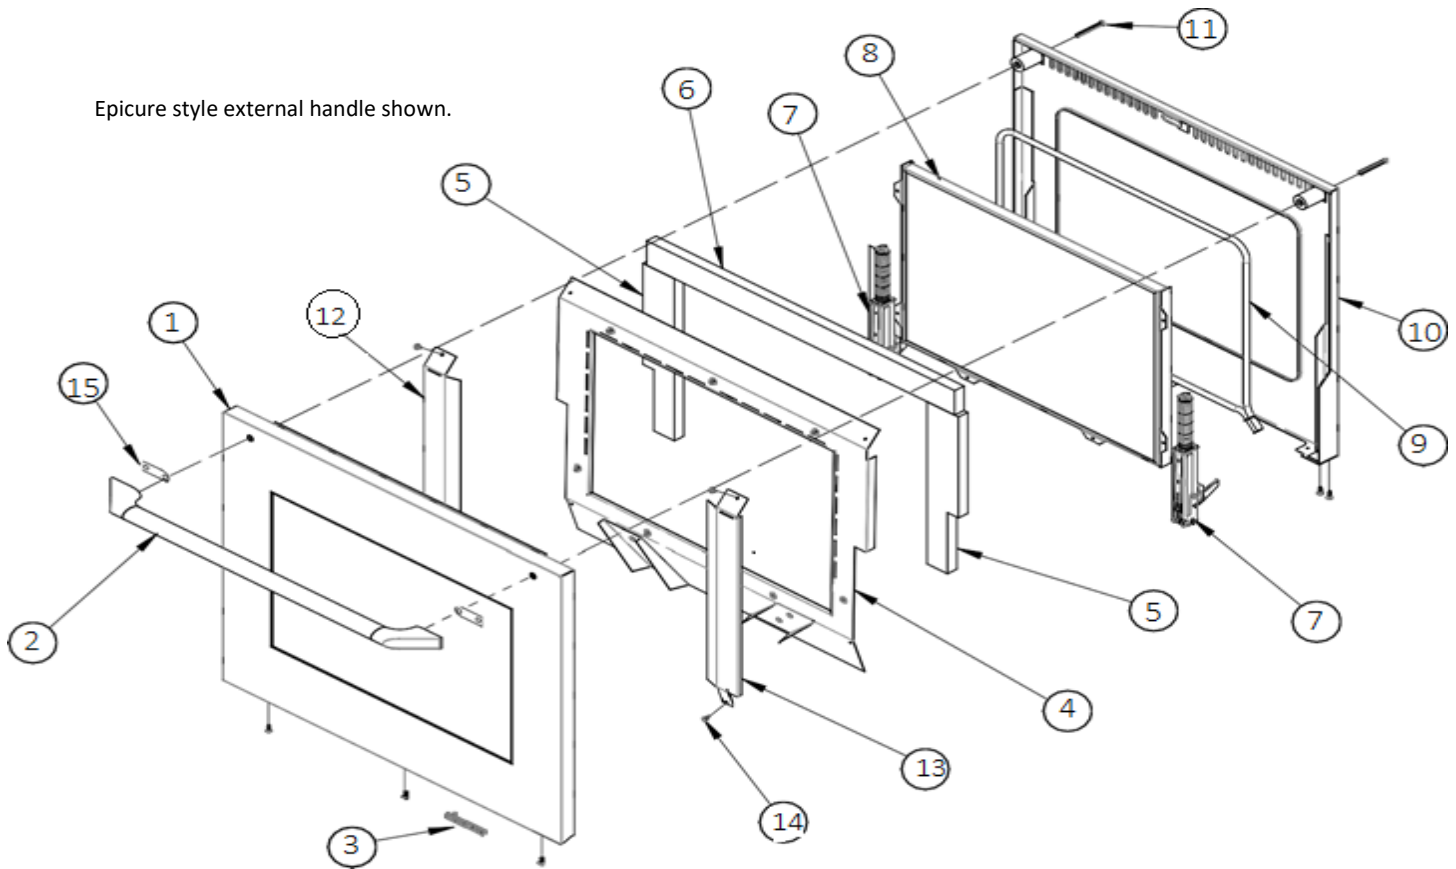

Complete Door Assemblies	
Part #	Description
702094-01	Top Door Assembly, EB
702087-01	Top Door Assembly, ES
702094-11	Top Door Assembly, EW
702091-01	Top Door Assembly, FS
702816-03	Top Door Assembly, PB
702816-01	Top Door Assembly, PS
702816-05	Top Door Assembly, PW
702094-02	Bottom Door Assembly, EB
702087-02	Bottom Door Assembly, ES
702094-12	Bottom Door Assembly, EW
702091-02	Bottom Door Assembly, FS
702816-04	Bottom Door Assembly, PB
702816-01	Bottom Door Assembly, PS
702816-05	Bottom Door Assembly, PW

Wall Oven Door Parts

Item	Part #	Description
1	702092-01	Assembly, Door Skin, EB,PB*
	702085	Assembly, Door Skin, ES,PS*
	702092-05	Assembly, Door Skin, EW,PW*
	702088	Assembly, Door Skin, FS*
2	13659-019	Assembly, Door Handle, EB
	13659-001	Assembly, Door Handle, ES
	13659-021	Assembly, Door Handle, EW
	702376-02	Assembly, Door Handle, PB,PS,PW
3	110167 ¹	Logo, Dacor 3", Chrome ¹
4	108041B	Heat Shield
5	105353	Insulation, Side Door
6	105352	Insulation, Top Door

Item	Part #	Description
7	108760	Hinge, EB,EW,PB,PW
	108008	Hinge, ES,FS,PS
8	72968	Window Pack
9	100015	Gasket, Window Pack
10	702086-03 ²	Door Liner Asy, EB,EW,PB,PW ²
	702086-01 ²	Door Liner Asy, ES,FS,PS
	701875-04BP ³	Door Liner ³
11	100026	Screw, #10-32x2.0, Torx
12	108040-02	Hinge Bracket Cover, Right
13	108040-01	Hinge Bracket Cover, Left
14	83263	Screw, Phil TRS, #8x3/8, Black
15	92008	Spacer, Door Handle, EB,EW


¹For use on lower door only

²Pre-assembled, includes door liner, window pack w/ gasket, hinges, hinge covers, all insulation, heat shields and air deflectors.

³Door liner alone.

*Note - does not include logo, must order seperately, see item # 3.

Wall Oven Chassis Assembly

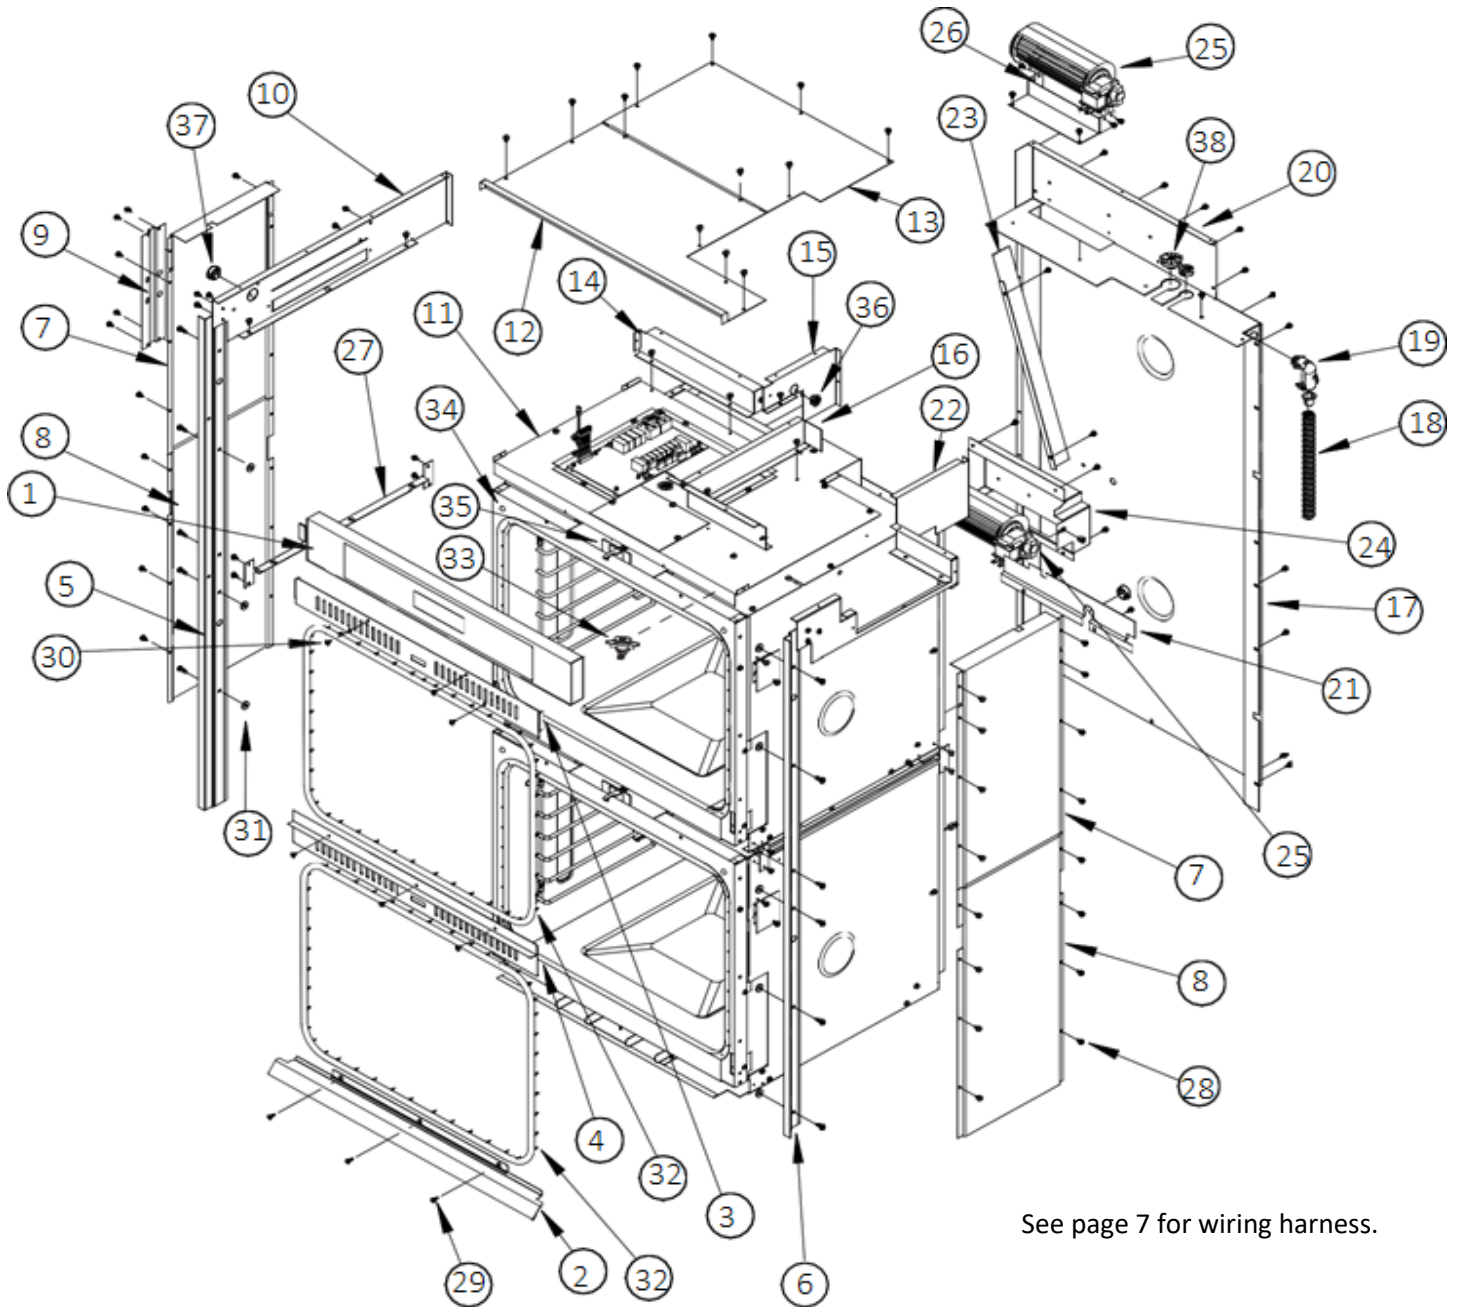


See page 7 for wiring harness.

Wall Oven Chassis Parts

Item	Part #	Description
1	See pg 6	Asy, Bezel/Capacitive Touch
2	107280-01B	Exhaust Grill, EB,PB
	107280-01W	Exhaust Grill, EW,PW
	113557-03	Exhaust Grill, ES,FS,PS
3	107833B	Intake Grill, Top
4	108017	Intake Grill, Bottom
5	107477-02B	Trim Post, Left,EB,ES,FS,PB,PS
	107477-02W	Trim Post, Left, EW,PW
6	107477-01B	Trim Post, Right,EB,ES,FS,PB,PS
	107477-01W	Trim Post, Right, EW,PW
7	105462	Heat Shield, Duct
8	105463	Heat Shield, Lower Duct
9	105478	Cover, Meat Probe Wire
10	107642	Top Left Side
11	See pg 7	Sub-chassis
12	107830	Cover, Top
13	107831	Cover, Top, Rear
14	108118	Cooling Fan Front Cover
15	108119	Cooling Fan Side Cover
16	108221	Conduit Corner
17	107862	Cover, Back
18	26420	Conduit, 1/2" Flex

Item	Part #	Description
19	82195	1/2 Flex 90° Connector
20	107829	Top Rear
21	107863	Cover, Double Oven
22	107641	Top Right Side
23	107676	Duct, Rear
24	107458	Housing, Lower Fan
25	82986	Fan, Cooling
26	105858	Extension, Cooling Fan
27	107640	Oven Support Bracket
28	83023	Screw, Slot, HWH, #10x3/8
29	83709	Screw, #8x1/2", Torx, Blk
30	83263	Screw, Phil TRS, #8x3/8, Blk
31	83555	Fiber Washer
32	108074	Door Gasket
33	92321	High Limit Switch
34	83618	Rubber Bumper
35	101339	Door Latch
36	92191-01	Bushing, Split .75"
	92191-02	Bushing, Split 1.00"
38	92191-03	Bushing, Split 1.375"


Wall Oven Control Panel Assembly

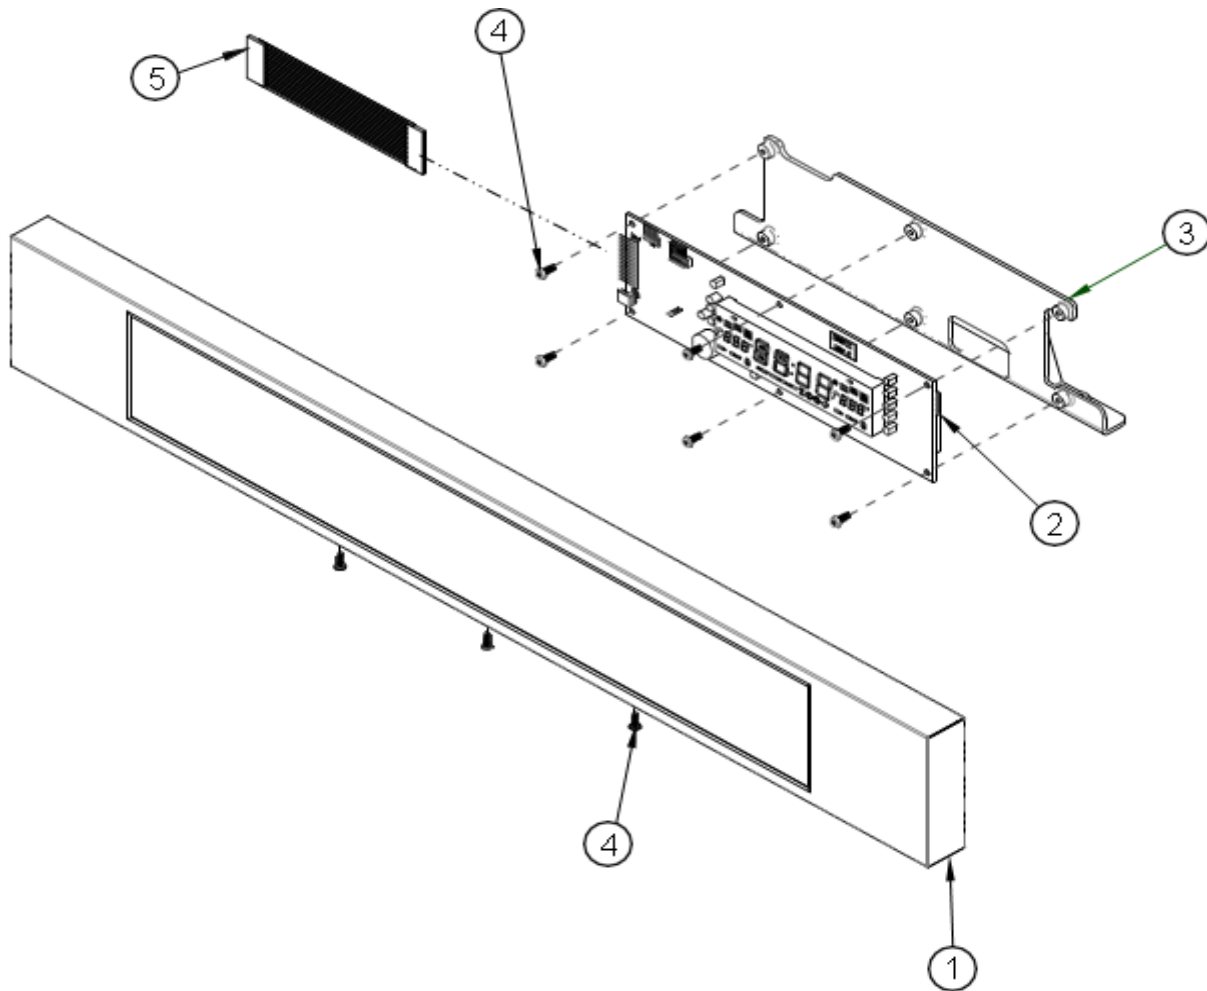

Item	Part #	Description
1	702831-02 ¹	Assembly, Bezel/Capacitive Touch, EB,PB ¹
	702800-02 ¹	Assembly, Bezel/Capacitive Touch, ES,FS,PS ¹
	702831-04 ¹	Assembly, Bezel/Capacitive Touch, EW,PW ¹
2	105336	Control Board
3	105334	Control Board Base
4	105486	Screw, 6-19x3/8"
5	105655	Ribbon Cable


¹Includes items 2, 3, 5 and 6 screws.

Sub-chassis Electrical Components

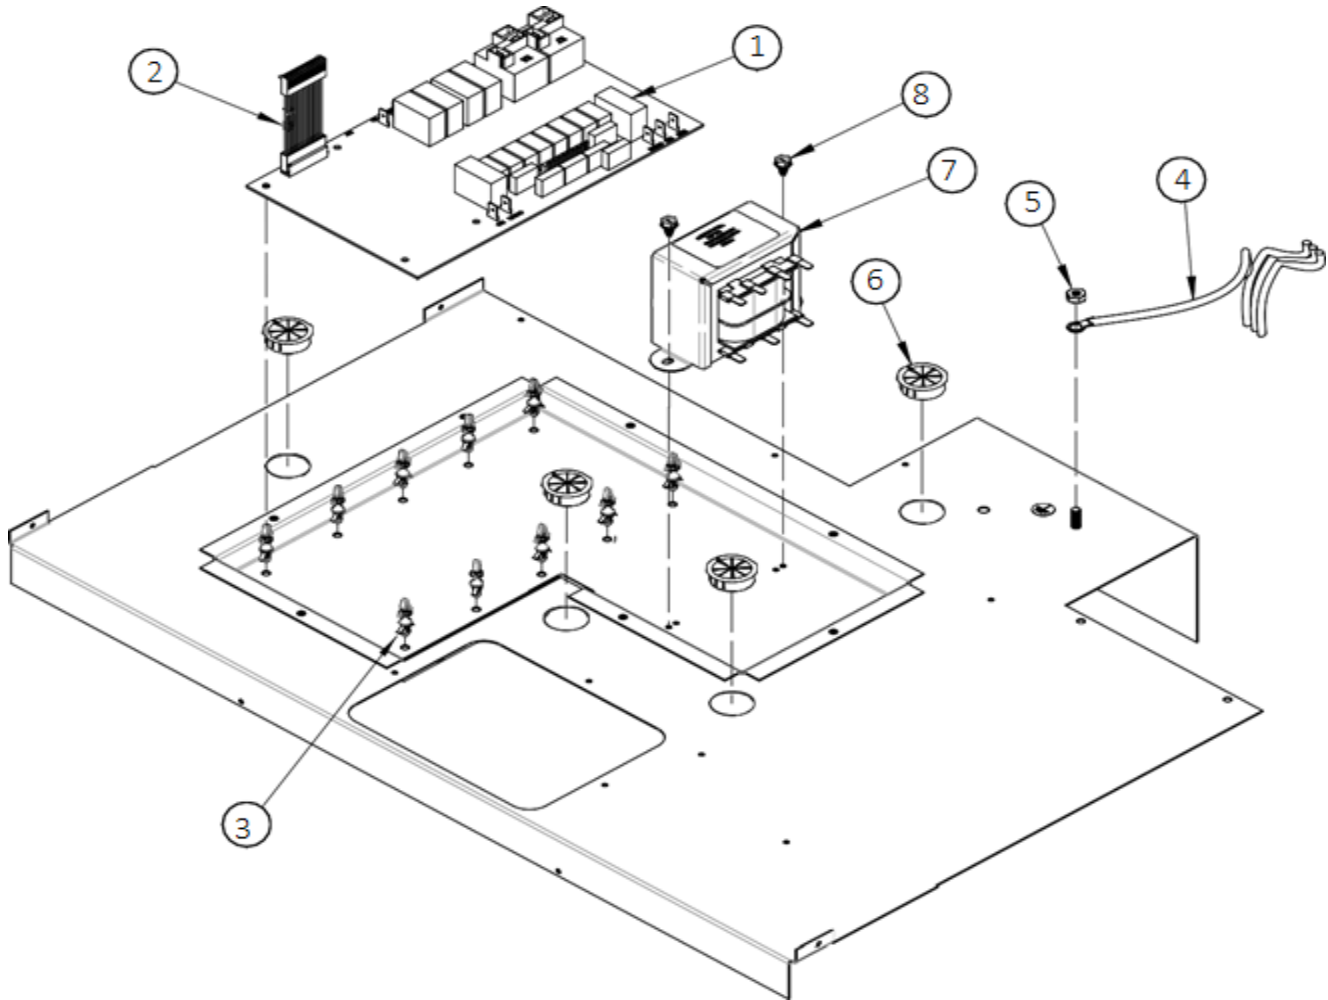

Item	Part #	Description
1	102380	Relay Board
2	105448	Wiring Harness, Power Board
3	83538	PCB Support, Nylon
4	105413	Wiring Harness, Main
5	83009	Nut, KEPS, #10-24
6	92191-02	Bushing, Split 1.0"
7	100832	Transformer, Light, 12 VAC
8	83023	Screw, Slot HWH #10x3/8 THD
-	105729	Wiring Harness Extension Relay Board/Touch Pan (not shown)

Wall Oven Cell Components

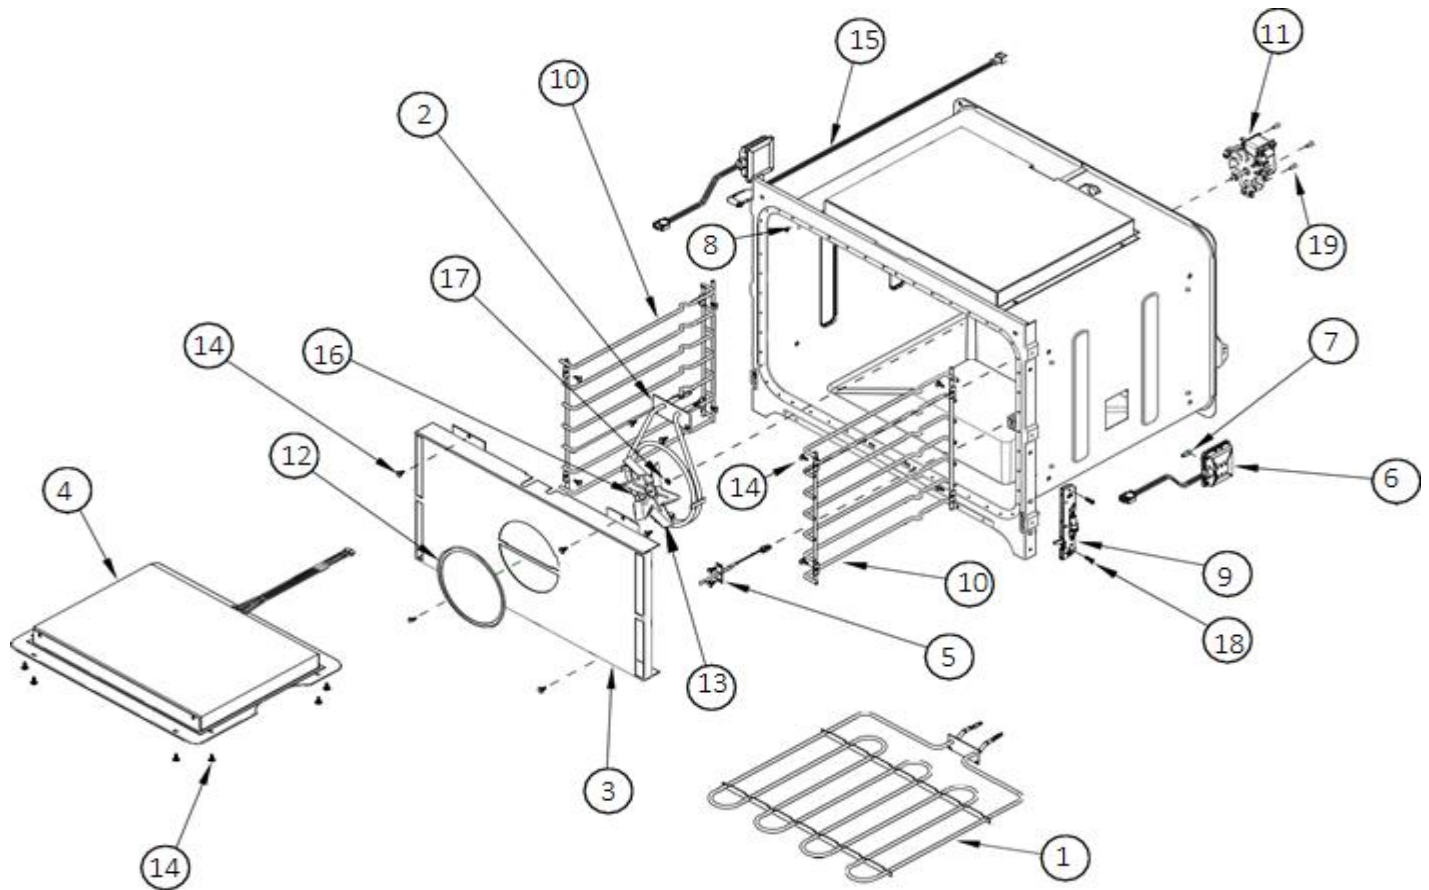

Item	Part #	Description
1	106898	Bake Element
2	82377 ³	Convection Element ³
3	105329BP ³	Convection Baffle ³
4	701529 ¹	Broil Assembly ¹
5	72752	Sensor, Temperature
6	92398	Asy, Halogen Light, 12V, 20W
7	100429	Bulb, Halogen, 12V, 20W
8	102468 ⁴	Plug, Probe, Oven Cell ⁴
9	107511	Hinge Receptacle
10	106991	Rack Support

Item	Part #	Description
11	700633 ²	Kit, Convection Fan ²
12	82891	Filter, Convection
13	101511	Convection Fan Blade
14	83708	Screw, Torx Wafer Head, #8x1/2"
15	72717 ³	Meat Probe Socket ³
16	102137	Hex Nut, Convection Fan
17	102136	Washer, Convection Fan
18	83696	Screw, Pan HD Phillips, #10-32
19	83379	Screw, #8-1/2 Thread Type A


¹Broil assembly includes element, glass and frame.

²Kit includes motor, fan blade, fan blade washer and mounting nut.

³Used on upper oven only.

⁴Used on lower oven only.

Wall Oven Miscellaneous Parts

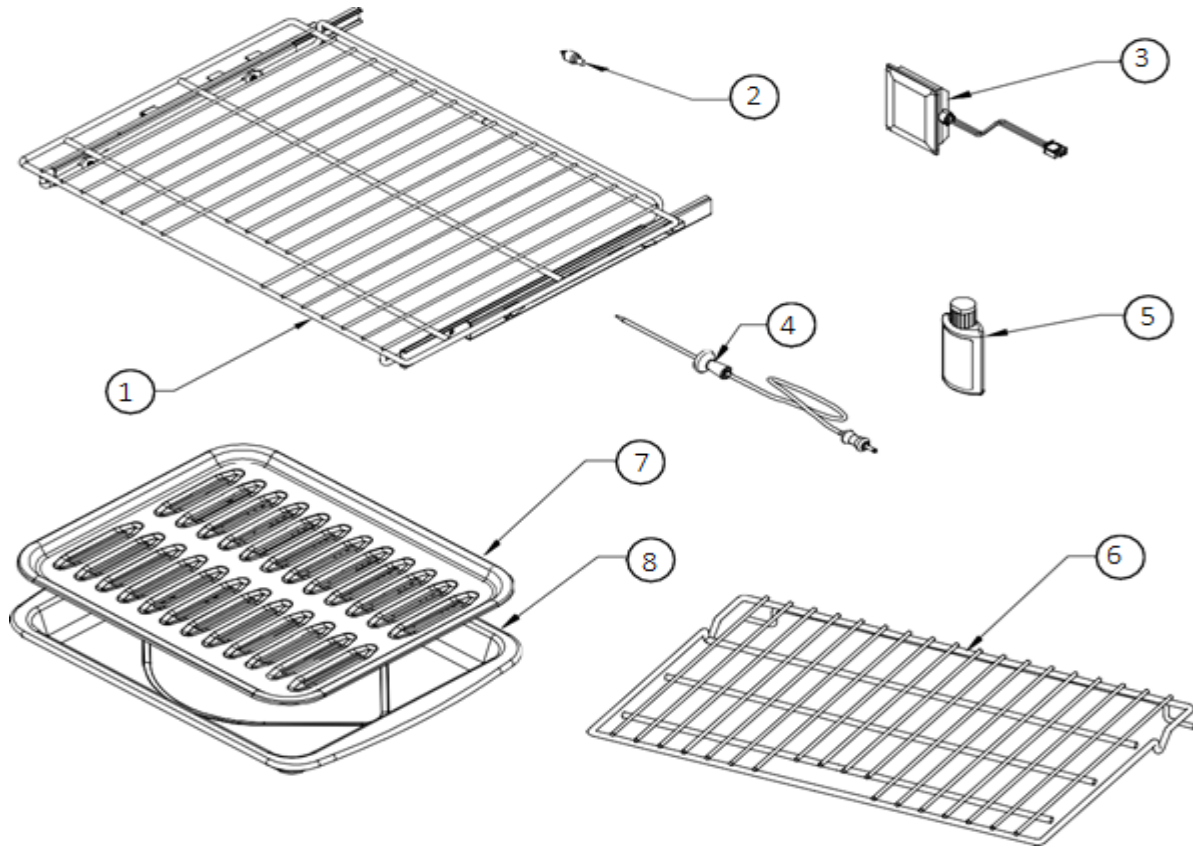

Item	Part #	Description
1	ARGO30H	Oven Rack, Gliderack Type
2	100429	Bulb, Halogen, 12V, 20W
3	92398	Asy, Halogen Light, 12V, 20W
4	72723	Meat Probe
5	100852	Stainless Steel Cleaner
6	106992	Oven Rack, Standard
7	82106	Porcelain Grill
8	82107	Porcelain Pan